

Blockbit UTM - How to: Import and Export UTM 1.5 to UTM 2.0

Thank you for choosing Blockbit.

In this document we will discuss how to perform the export and import process from UTM 1.5 to UTM 2.0

After reading and applying the steps in this Tutorial you will be able to export your Blockbit UTM data to the most updated version with ease and security.



Taking into account the criticality of the exported configurations, it is recommended that the export procedure be carried out locally and that the import be made on the same network in order to ensure that the administrator has access to the Device in case something unexpected occurs.

This guide consists of the following themes:

- [Export Requirements](#)
 - [Update - CLI](#)
 - [Update - WEB Interface](#)
 - [How to generate a Snapshot](#)
- [Export](#)
- [Import Requirements](#)
- [Installation of UTM](#)
 - [Download installation files](#)
 - [OVA Download](#)
 - [IMG Download](#)
 - [Recording the installation image on flash drive](#)
 - [Appliance Installation](#)
 - [Installation of BB2](#)
 - [Installation of BB 5/10/50/100/500/1000](#)
 - [Installation of BB 10000 and legacies](#)
 - [Importing the Virtual Machine](#)
 - [First Access](#)
- [Exception Configuration](#)
- [Installation Wizard](#)
- [Accessing Web interface](#)
- [Licensing](#)
- [Import](#)